



# BIKE Tracker

4G  
LTE



# Thank you very much,



**... for ordering our GPS Tracker!**

Read the instructions carefully before using the GPS tracker for the first time. Keep the instructions somewhere safe in case you may need it in the future. However, do not hesitate to contact us if you have any problem or doubt via WhatsApp, chat or email.



# CONTENTS

1. Scope of delivery .....	3
2. Product description .....	4
3. Activation .....	5
4. Start-UP .....	6
5. Meaning of the LED lights .....	8
6. Installation .....	9
7. Use .....	11
8. Technical details .....	12
9. Safety instructions .....	13
10. Instructions for disposal of used batteries ...	18
11. Instructions for disposal of electrical .....	
devices .....	20

# Scope of delivery:

1.

## The scope of delivery includes:

- Salind BIKE Tracker
- M2M-SIM-card (already in place, not interchangeable)
- USB charging cable
- Wall plug (Europlug)
- Bracket incl. 3 rubber inserts
- Torx key
- Torx screw



# Product description

2.



1. Protective flap

2. On/Off Button (Tracker)

3. LED lights

4. USB port

5. SIM card (already in place, not interchangeable)



6. On/Off Button (LED lights)

# Activation

 
3.

In order to start using your Salind BIKE Tracker, first you will have to activate it online. Please enter the following link:

**[start.finder-portal.com](http://start.finder-portal.com)**

... and follow the instructions.

You may also find further details of the activation process in the following link:



**<https://www.youtube.com/watch?v=r3t7ugoiXVQ>**

(You may use the subtitle option on YouTube in order to translate audio)

# Start-UP

## 4.

The moment you successfully activate your device; you are ready to use your GPS Tracker. Charge the device before its first use. Press and hold the on/off button of the device for four seconds and the device will switch on. Please refer to the following images in order to have a better understanding of the start-up instructions.




We recommend you start your device for the first time in an open area like a garden or a terrace (this means, not inside your house, garage, basement, or other similar spaces).

# Illustrations

## 1. Turning the GPS Tracker ON and OFF

Press and hold the on/off button of the device for 4 seconds. This will turn your device on/off. The LED lights will turn on shortly before the device is completely turned off.

 You must wait 1 minute between turning the device on and switching it off.



## 2. Functionality check

If you would like to check whether the device is switched on, press the on/off button once. The LEDs will show you that the device is on (see illustrations).

Pressing it again as well as leaving the device for a long rest time will cause the LED lights to turn off. Nevertheless, the device will still be on.

If you press the on/off button again and the lights do not go on, the device is switched off.



## 3. Switching the rear lights on and off

Press 1x = Rear lights turn on  
Press 2x = Rear lights will blink  
Press 3x = Rear lights turn off





# Meaning of the LED lights

## 5.



### **The red LED flashes every 1-2 seconds?**

Low battery level.

### **The red LED is off?**

The Battery is fully charged or battery level is not empty.

### **The red LED is fixed?**

The GPS tracker is charging.



### **The green LED is blinking?**

The GSM signal is available.

### **The green LED is fixed?**

There is no available GSM signal.

The GPS tracker is looking for a signal.



### **The blue LED is blinking?**

The GPS reception is available.

### **The blue LED is fixed?**

There is no available GPS reception.

The GPS tracker is looking for a signal.



### **All LED lights are off?**

 
The GPS tracker is in Standby mode or rather off.



These signals are only valid for the initial start-up. NOT when checking whether the device is switched on (see page 7, item 2). Here, the LEDs only light up continuously.


# Installation

6.

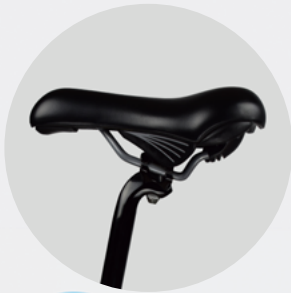


1.

 **1.** Given that this model includes a GPS tracker and a rear light for your bike, we recommend attaching it to the seat post. To ensure an optimal hold, wipe the bar thoroughly before attaching the bracket.

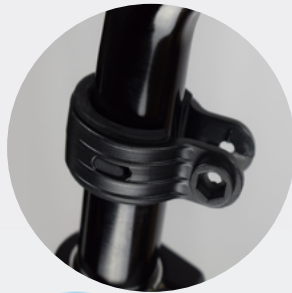

2.

 **2.** Remove the connector from the bracket by loosening the Torx screw using the Torx key. Now you can put the bracket around the pole. Select the appropriate rubber insert for the width of the saddle rail so that the bracket has a firm hold.

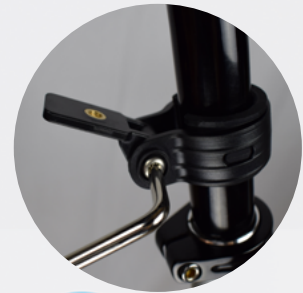

3.

**3.** Choose your preferred height (although a higher position is recommended for bicycles without a mudguard) and, once you do so, insert the bracket connector and tighten the Torx screw using the Torx key.




**4.**

 **4.** Now bring the attachment of the tracker together with the holder. You will hear a “click” once they have been attached correctly.



**5.**

**5.** Now take the additional Torx screw and tighten it with the help of the Torx key on the holder of the tracker.

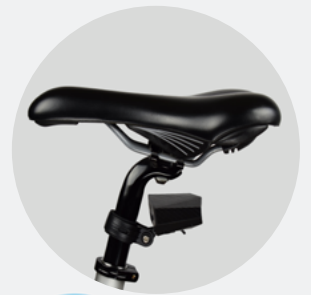

**6.**

**6.** Once you have followed all the instructions, your Tracker will now be securely fastened.



# Use

## 7.

As soon as your device has been successfully activated and started, you are ready to track your device. Choose and use your phone, tablet or PC to start tracking it in the PAJ GPS FINDER portal! Download the PAJ FINDER portal App or enter the following link to the desktop version:

[finder-portal.com](https://finder-portal.com)



# Technical Details

8.

<b>Dimensions</b>	105 mm x 60 mm x 28 mm
<b>GPS accuracy</b>	Up to 10 meters
<b>Battery</b>	3,7 V 3.000 mAh Li-ion
<b>Time to start</b>	Cold start: 45-120 s Standby: 35 s In operation: 1 s
<b>Weight</b>	131 g
<b>Network</b>	GSM/GPRS/WCDMA/FDD-LTE/ TDD-LTE
<b>Bandwidth</b>	FDD-LTE: B1 B2 B3 B4 B5 B7 B8 B12(17) B20 B28 TDD-LTE: B38 B39 B40 B41 WCDMA: B1 B2 B5 B8  GSM 850 MHz (max. 2 W) GSM 900 MHz (max. 2 W) DCS 1800 MHz (max. 1 W) PCS 1900 MHz (max. 1 W)
<b>GPS + Network Chip</b>	SC9820E
<b>GPS reception</b>	-120 dBm
<b>Storage temperature</b>	From -40 °C to +85 °C
<b>Operating environment</b>	From -20 °C to +55 °C

# Safety Instructions

## 9.

### Signal words

The following signal words are used in these operating instructions:



#### **NOTE!**

This signal word is used to draw your attention to an issue or situation. It also serves as a recommendation for proper use. Possible damage to property or personal injury can be prevented if this is observed.



#### **WARNING!**

This classifies a hazard of medium risk level. Failure to observe the warning may result in serious injury or damage.

## Proper use

Read these safety instructions for this GPS tracker carefully before using it for the first time in order to use it properly. The intended use of the GPS Tracker to locate an object or a living being is only that described in this manual. Please note that it is a criminal offence to monitor third parties using a GPS tracker without their consent. If you use it in any other way, it will be considered improper and may result in damage to property or even personal injury. Please note that the GPS Tracker is not a child's toy. In other countries and regions there are different laws concerning digital positioning and tracking of people, animals and/or objects. Salind UG cannot be held responsible if such laws or regulations are violated. The user is held solely responsible for this.



### NOTE!

The manufacturer and dealer accept no liability for damage caused by improper or incorrect use.

## Safety



### **WARNING! RISK OF ELECTRIC SHOCK!**

A faulty electrical installation or a mains voltage that is too high can lead to an electric shock. Before use, check the mains voltage of the socket with the information on the rating plate. To ensure that you can disconnect the charging cable from the mains as quickly as possible in the event of a fault, connect the mains adapter so that it is easily accessible. If you notice any visible damage to your GPS Tracker or the charging cable, do not use it. Only use the original parts supplied to charge the GPS Tracker. If the charging cable is damaged, replace it only with original accessories from the manufacturer. Never place the GPS Tracker near flames or hot surfaces. The GPS Tracker is not waterproof. However, we recommend that you use it in dry environments if possible. The charging cable should only be used indoors. Keep it away from moisture and do not bend it. Do not open the housing of the GPS tracker. Leave the repair work to qualified specialists. However, if you carry out repairs yourself, connect the GPS Tracker improperly or operate it incorrectly, liability and warranty claims are excluded.

## Hazards for children and vulnerable people

Please do not allow the GPS Tracker to be used unsupervised by people (including children) with reduced physical, sensory or mental capabilities. The exception is if they have been instructed beforehand by the person responsible for their safety of how to use the appliance. **Make sure that your child does not handle small parts (e.g. accessories, etc.). These can be swallowed and lead to suffocation**



### NOTE!

Inform your child about the dangers and use of the GPS tracker.

## The battery



**WARNING! EXPLOSION AND FIRE HAZARD!**

Hereafter, you will find information and notes regarding the handling of the battery: The GPS Tracker is powered by a lithium polymer battery. This is not replaceable and must not be removed or opened. **Keep the GPS Tracker away from heat sources and high temperatures, such as direct sunlight in a vehicle (even when charging the battery).** Failure to beware of this warning may result in the destruction of the battery, overheating, explosion and fire. These hazards also exist if you use non-original accessories to charge your device. Do not burn or punch the GPS Tracker. Protect it from mechanical damage. Do not remove, drop, disassemble or modify the battery with pointed or sharp objects. If a child swallows the battery, seek medical help immediately! If you need to have the battery replaced, please contact our support team.



**WARNING! RISK OF CHEMICAL BURNS!**

Batteries that leak due to damage can cause burns if they come into contact with the skin. **Therefore, never open the battery.** However, if the battery leaks, please wear protective gloves.



## Electromagnetic compatibility

Please observe all prohibitions and switch off the GPS tracker immediately in dangerous areas and if it can cause interference. It should not be used near, for example, medical equipment, fuels and chemicals, or in blasting areas. Mobile devices may cause interference that can affect performance. Transformers and very strong magnetic fields must be avoided. Otherwise, deviations in the transmission may occur.



### NOTE!

Failure to observe these recommendations may result in malfunctions or damage to the GPS tracker.

## Cleaning



### WARNING! RISK OF DAMAGE!

In the following you will find information and instructions on how to clean the GPS tracker. Do not use aggressive cleaning agents or brushes. **Do not clean the GPS Tracker with cleaning objects (e.g. knives, metal sponges). This can damage the surface.** Never put the GPS Tracker into water, in a dishwasher (or similar) and do not use a steam cleaner. The surface can be wiped with a slightly damp cloth. The GPS Tracker should be wiped completely dry afterwards.

## Storage

If you are not going to use the GPS Tracker for a long period of time, switch it off. Place the tracker in its original packaging or in a same size box. Protect the tracker from dirt and moisture.



### NOTE!

Keep the FINDER away of children's reach in order to avoid possible damage to property or personal injury.

## Declaration of conformity

Hereby, Salind UG (haftungsbeschränkt) declares that the tracker, BIKE Tracker 4G, is in conformity with the Directive 2014/53/EU. The complete text of the EU Declaration of Conformity can be found at the following Internet address:

[www.salind-gps.de/  
konformitaetserklaerung/](http://www.salind-gps.de/konformitaetserklaerung/)



## Packaging disposal

Dispose of the packaging according to type. Throw cardboard and paper to the corresponding container. Foil belongs in the recyclables collection.



# Disposal of used batteries

10.

The following note is addressed to those who use batteries or products with products with built-in batteries and who will not resell them in the form in which they were supplied to them (end users).

## **Free recall of used batteries.**

Batteries must not be disposed of with waste. You are legally obliged to return used batteries so that proper disposal can be guaranteed. You can return used batteries to a local collection point or to your local retailer. As a distributor of batteries, we are also to take back used batteries, although our obligation to take back used is limited to the type which we carry or have carried as batteries in our range. Used batteries of the aforementioned type can therefore either be returned to us with sufficient postage or handed in directly to our dispatch warehouse at the following address free of charge:



### **Salind UG (haftungsbeschränkt)**

Auf der Fuhr 3  
51570 Windeck  
Germany

E-Mail: [info@salind-gps.de](mailto:info@salind-gps.de)

## Meaning of the battery symbols

Batteries are marked with the symbol of a crossed-out dustbin (see illustration). This symbol indicates that batteries must not be disposed of in household waste. Batteries containing more than 0.0005% mercury by mass, more than 0.002% cadmium by mass or more than 0.004% lead by mass are also marked with the chemical name of the pollutant below the dustbin symbol. The abbreviation „Cd“ stands for cadmium, „Pb“ for lead and „Hg“ for mercury.



# Disposal of electrical devices

## 11.

**The Electrical and Electronic Equipment Act (ElektroG) contains a large number of requirements for the handling of electrical and electronic equipment. The most important ones are summarised here.**

### **1. Separate collection of WEEE:**

Waste Electrical and Electronic Equipment that has become waste is referred to as WEEE. Owners of WEEE must dispose of it separately from unsorted local waste. In particular, WEEE does not belong in household waste, but in special collection and return systems.

### **2. Batteries and accumulators:**

As a rule, owners of WEEE must separate spent batteries and accumulators that are not enclosed in the WEEE before handing them over at a collection point. This does not apply if the WEEE is handed over to public waste management authorities and separated from other WEEE there for the purpose of preparation for reuse.

### **3. Options for returning old appliances (WEEE):**

Owners of WEEE from private households can hand it in to public waste management authorities or at the collection points set up by manufacturers or distributors as defined by the ElektroG. An online directory of collection and collection points can be found here: <https://www.ear-system.de/ear-verzeichnis/sammel-und-ruecknahmestellen.jsf>

#### **4. Data Protection:**

Old equipment often contains sensitive personal data. This applies in particular to information and telecommunication technology devices such as computers and smartphones. For your own sake, please note that each end-user is responsible for deleting the data on the old equipment to be disposed of.

#### **5. Meaning of the „crossed-out dustbin“ symbol:**

The symbol of a crossed-out dustbin regularly displayed on electrical and electronic equipment indicates that the respective device must be separated from unsorted local waste at the end of its service life.



#### **6. Manufacturer registration number**

As a manufacturer, within the meaning of the ElektroG, we are registered with the responsible foundation Elektro-Altgeräte Register (Benno-Strauß-Str. 1, 90763 Fürth) under the following registration number: **DE33887550**.

# Do you have any questions?



**In this case, please contact us and we will be delighted to help you!**



Salind UG (haftungsbeschränkt)  
Auf der Fuhr 3  
51570 Windeck  
Germany  
Mail: [info@salind-gps.de](mailto:info@salind-gps.de)  
Phone: +49 (0) 2292 39 499 60  
Web: [www.salind-gps.de](http://www.salind-gps.de)

The Salind GPS Team wishes you to enjoy your BIKE Tracker!